



ShrutiVani is India's FIRST 2-in-1 Electronic Shruti Box capable of playing high quality TAMBURA SHRUTI and HARMONIUM SHRUTI along with an accurate inbuilt electronic TUNER.

OPERATING INSTRUCTIONS

ON/OFF:

Switch on the instrument by pressing the ON/OFF button.

Before you switch on, make sure to plug in the mains cord; the two-pin male plug into your AC wall power supply, and the female connector on the back of the ShrutiVani.

Once ON, pressing the ON/OFF switch again will turn the ShrutiVani off.

SHRUTI 2-in-1:

Press this button to select the Shruti Instrument you want to play: Tambura Shruti or Harmonium Shruti. The corresponding LED will glow against the selected Shruti.

VOLUME:

Use the arrow buttons against VOLUME to set the volume of the instrument.

Press the Up or Down arrow buttons to respectively increase or decrease the volume of the Shruti Box.

MAIN SA:

Use the arrow buttons against MAIN SA to select your required sur (note).

Press the Up or Down arrow buttons to navigate from the lowest to the highest sur (i.e. main notes).

The sur indication is arranged like the keys of a harmonium or a piano keyboard for quick reference.

The selected sur is represented by its corresponding LED in the display above.

The first LED indicates A scale 6 Kattai (lowest sur). The last LED indicates B scale 7 Kattai (highest sur 2nd octave)

FINE SA:

Use the arrow buttons against FINE SA to further fine tune your sur (note). The Up & Down buttons allow fine pitch adjustment between two main notes.

Press the Up button to adjust between C & C#. Press the Down button to adjust between C & B.

SELECT:

Press this button to selection the style on a rotational basis: PA (Pancham), MA (Madhyam), NI (Nishad) or only SA.

The corresponding LED will glow against the selected style only for PA, MA or NI.

To select SA, press the button until the LED is off i.e. when the selected style is SA, all LEDs will be turned off.

Shrutivani

TEMPO:

Use the arrow buttons against TEMPO to adjust the tempo.

Press the Up or Down arrow buttons to respectively increase or decrease the tempo.

PLUCK:

Use the arrow buttons against PLUCK to change plucking.

Press the Up or Down arrow buttons to respectively move from a hard sound to a soft sound.

TONE:

Dial the TONE knob to adjust the tone (Treble / Bass) as required.

TUNER:

To enter Tuner mode, press the SHRUTI 2-in-1 button to select the Harmonium Shruti, then press the select button until all LEDs are turned off.

BATTERY OPERATIONS:

To use on battery instead of electricity, insert 8 AA pencil cells to switch on the Shrutivani. In case of low Battery, the LED against Low Battery will glow and in sometime the instrument will shut down.

WARRANTY:

The Shrutivani Instrument is warranted against defects arising out of faulty of defective materials or workmanship for a period of ONE YEAR from the date of purchase. In case of defect developing within the period of warranty, the company will undertake to repair the instrument free of charge, provided the instrument is returned to the dealer, freight prepaid with adequate packing.

This Warranty is void in case of any of the following:

1. The instrument is damaged by physical abuse, improper handling, reckless use or negligence of the user.
2. Any repairs or modifications are attempted on the instrument by unauthorized persons.
3. The warranty seal on the instrument is removed or tampered with